

UC Solo

SINGLE MODULE WATER CULTURE SYSTEM



GROWTH MODULE



CCH2O LID 8




CCH2O NET POT 8



DRAIN VALVE KIT



AIR HOSE

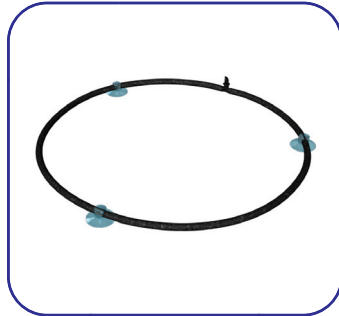

AQUA-PORE DIFFUSER



AIR PUMP



CULTURED SOLUTIONS VEG A/B & GROWSTONE

Current Culture H2O would like to thank you for purchasing a UC Solo, Single Module Water Culture System. Follow these simple instructions and you will be growing trees in no time!

ASSEMBLY INSTRUCTIONS

1. Unpack and identify all components.
2. Install DRAIN VALVE in UNISEAL at GROWTH MODULE base. Make sure valve is closed!
3. Attach suction cups to AQUA-PORE DIFFUSER and secure in base of GROWTH MODULE.
4. Cut AIR HOSE in two equal lengths. Attached one section of AIR HOSE to each barb on AQUA-PORE DIFFUSER.
5. Install CCH2O LID 8 atop GROWTH MODULE, leaving PORT-HOLE COVER off.
6. Pull the AIR HOSES up and out CCH2O LID PORT-HOLE. Install PORT-HOLE COVER.
7. Attach AIR HOSES to AIR PUMP.
8. Install CCH2O NET POT 8 in CCH2O LID 8.

GROWING INSTRUCTIONS

1. Fill GROWTH MODULE with purified water to within 2" of GROWTH MODULE lip. (8 gallon units will operate with 6-7 gallons of solution, 13 gallon units will operate with 10-11 gallons of solution)
2. Check for leaks, if a leak occurs contact CCH2O immediately at (559)266-4769.
3. Plug in AIR PUMP.
4. Add included CULTURED SOLUTIONS VEG A/B to GROWTH MODULE at recommended dilution. Adjust pH between 5.8 - 6.2.
5. Fill CCH2O NET POT 8 with GROWSTONE (rinse thoroughly before installing into CCH2O LID 8).
6. Transplant rooted cutting/seedling into CCH2O NET POT 8 so that root base is completely covered by GROW MEDIA.
7. Install CCH2O NET POT 8 with plant in CCH2O LID 8, maintain a water level in the GROWTH MODULE so that plant root mass is submerged half way.

